
Changing sounds (Micro Controller's) on the DCv3 board.

Any DCv3 type main board can have it's sounds changed by merely changing the Micro Controller. This is easily done as shown below. A micro from any other board, or purchased separately, can be used in another board by switching the Micro Controller. This not only allows for changing the sounds but also for changing the type of operation, i.e. from "Auto-Play" to "Standard Play" type systems.

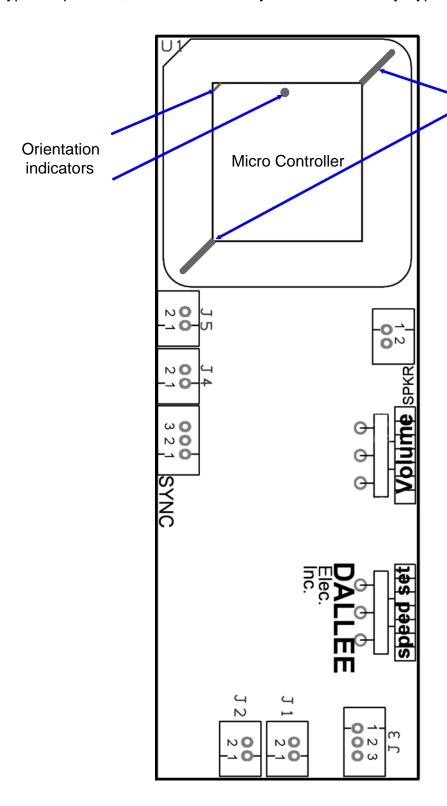

Removal slots. Use small screw driver's or cut and form a paper clip into a "J". Slip under Micro Controller corners and carefully pry out.

Place new one in same orientation making sure the pins on sides align with slots and carefully press firmly into socket.