

Yard Master II - M #1
(track power)
Initial startup: Set direction switch so that the engine runs towards booth (FWD) when booth selected.

