

Sample installation - early American Models FP-7



SwVol Board mounted in doorway (cut open door for settings adjustment).

Speaker (1.5") mounted in cardboard baffle. Although one speaker shown, two can be placed in this baffle to obtain more sound.

Cab interior light

Dual Headlights mounted in tubes to prevent stray illumination.

Main board placed against roof top without tape. Hotmelt used on sides of capacitors to secure in place.

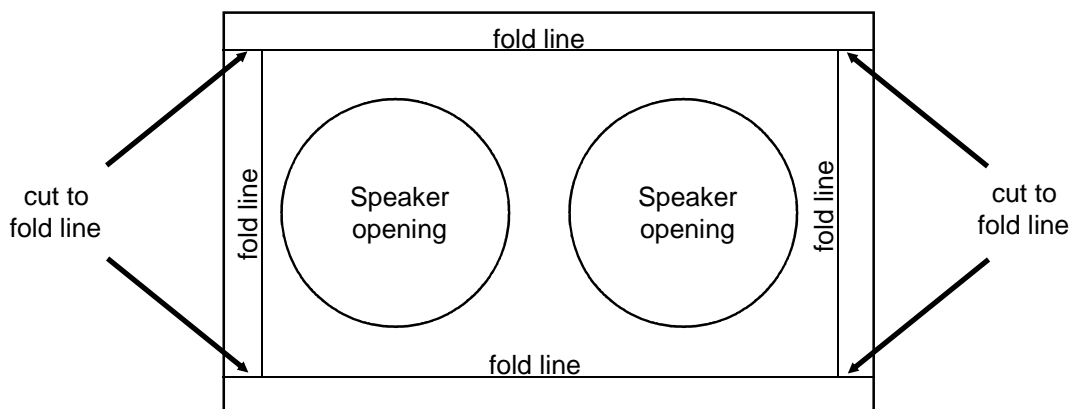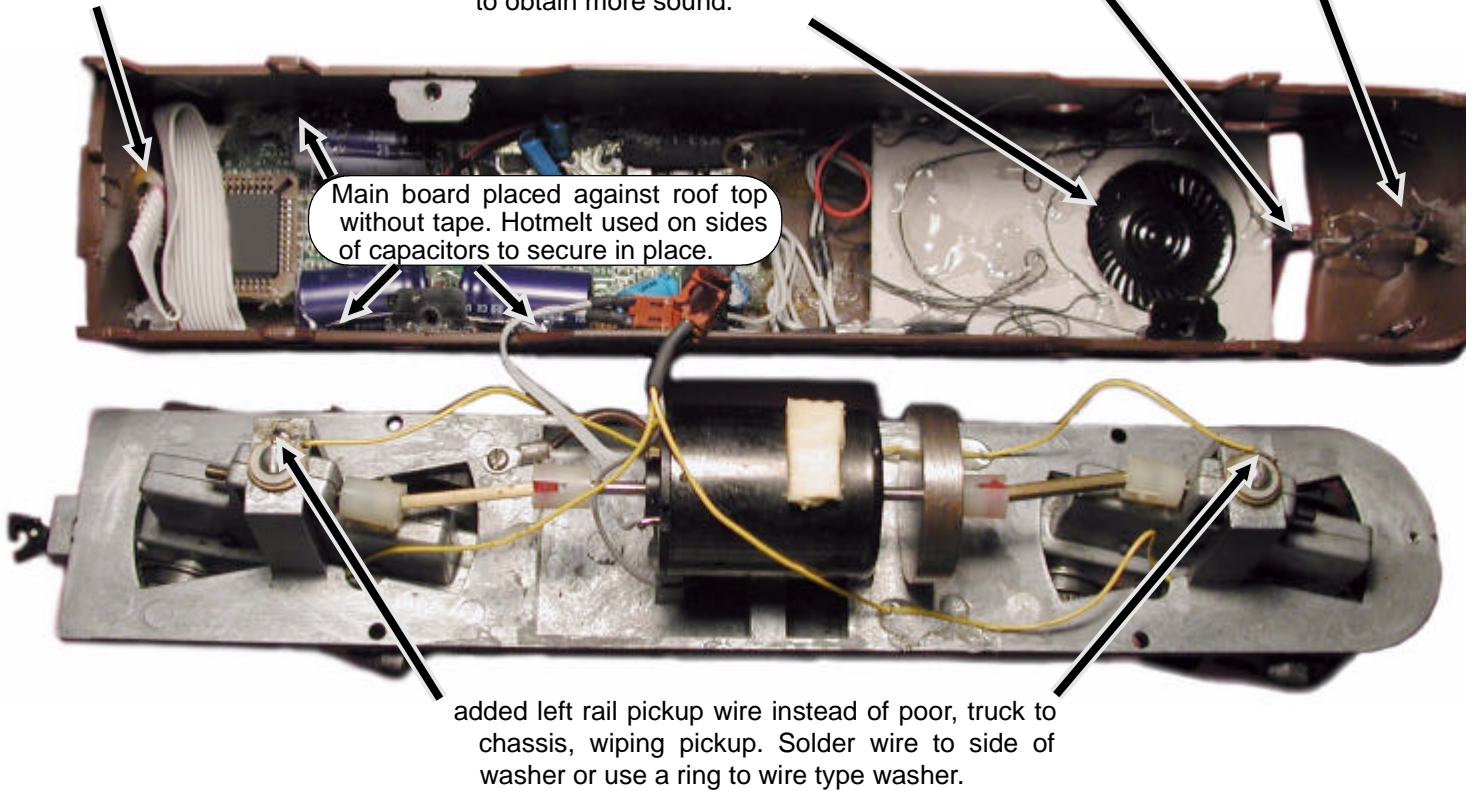

Template for making speaker baffle. Copy template and glue on cardstock. Cut circle openings for one or two speakers as desired. Cut as shown for proper folding. Fold edges down as shown and bend tabs to form a

partial box. Glue speakers in place behind circle cut-outs. When mounting in top of engine shell be sure to fill the center of the roof with hot melt or glue to make an air tight sound chamber.