

# Silhouettes

for AF Heavyweight  
Pullman Observation

Item #652654

# DALLEE


ELECTRONICS, Inc.

246 W. Main St.  
Leola, PA 17540  
(717) 661-7041  
www.dallee.com



## American Flyer Pullman Silhouette installation instructions.

- 1 - remove the old windows and carefully clean the glue from the body of the car.
- 2 - Carefully cut along the line between the two sides of the silhouettes to separate the two sides. Then cut the four door windows out cutting along the light lines to separate them.
- 3 - glue the door windows in by using the top and bottom edge. Only a small amount of glue is necessary. You can also use 3M's "glue stick" (others aren't as good as the original).
- 4 - select the side that matches the one that you are going to do first. Separate the pieces by cutting to the outside of the black lines of the white boxes. Then place them into position. Some trimming may be needed since the plastic mouldings aren't exactly the same from car to car. Make sure that when placing them into position, that the person in the silhouette is properly placed into the windows (some side to side motion will set them to where you want them if trimmed too close).
- 5 - place a light amount of glue along the top front edge and bottom edge and using a tweezers, put them in place. We use "Quick Grip" by Beacon Industries for a lot of things and it works well here as well. It's fast and easy to use but you have to keep things clean to prevent it from getting onto the viewable area's!
- 6 - continue throughout the car to replace all of the windows.
- 7 - if a light bulb is still used, you will need to add more diffuser paper near the light bulb to prevent it from flooding that area of the car. When installing LED lighting strips, item #2381 (Amber) works well for these old time cars, place it in the roof and carefully position for the best light dispersion.
- 8 - clean and lubricate your wheels, screw the car back together and enjoy!

cut out the strips and then cut the white areas out (shown with arrows) and trim as necessary to fit into the proper window area as required.

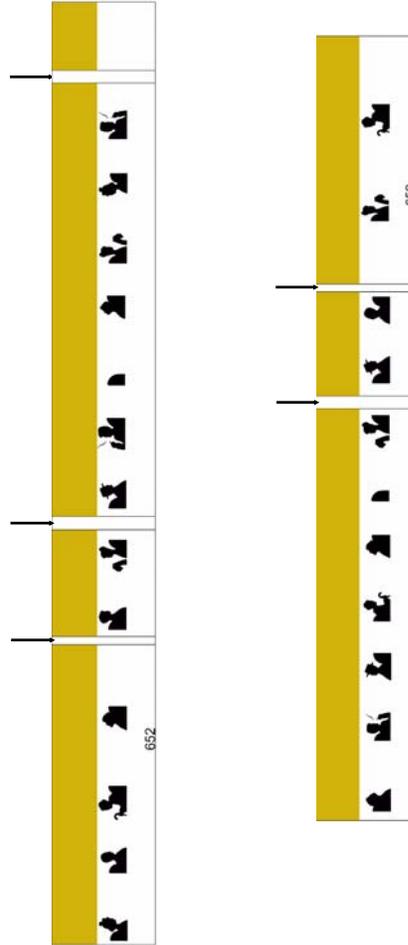

Cut windows into 4 pieces along lines shown.  
Align and glue in place using the edges.

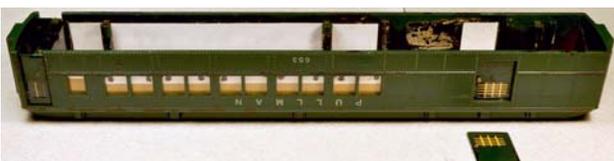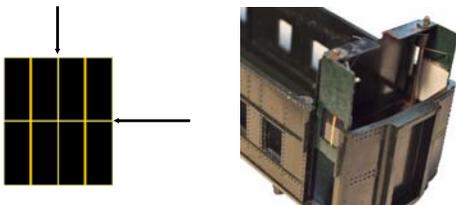

653 combine, cut and glue baggage windows in place.

Installed



cut to install



The appropriate number of windows are supplied for each car type. For example, only baggage doors come with the 653 as well as 2 less door windows.