
HiLine™ Auto-W/H/B

HiLine™ Sound Unit Auto Horn/Whistle/Bell input harness with reed switches

Item #1589

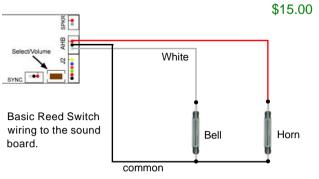

Connect Whistle/Horn and Bell reed switch wires to the three connector wires.

Plug 3 pin connector into the AHB connector.

All other connections need to be done as per the instructions for your installation except for the motor wires (J1 Blue and Yellow). They do not get connected since they are not used when operating when doing a synchronized chuff.



246 W. Main St. Leola, PA 17540 (717) 661-7041 www.dallee.com