


Sample installation - Scale GG-1

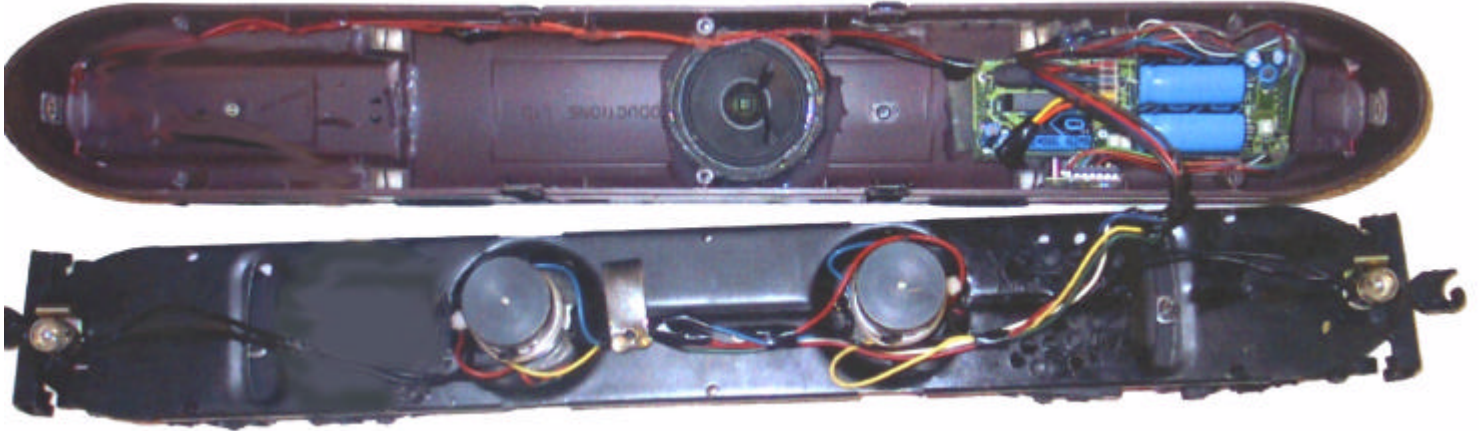


As can be seen, plenty of space is available inside a full scale GG-1. This unit shows the standard lamps that existed. A better option is to install the lamps that were supplied with the LocoMatic™ system.

An added touch would be the addition of two interior cab lamps. These can be accessed from the LocoMatic controller as Aux1/Aux2. Use Aux1 as the forward cab and Aux2 as the rear cab. This way you can independently illuminate the proper operating cab when at idle.

Coil couplers could also be added. You may need addition modifications to the coupler pockets for installation.



Install speaker in enclosed tube flush to the inside ceiling or use, if available, the existing speaker mount.

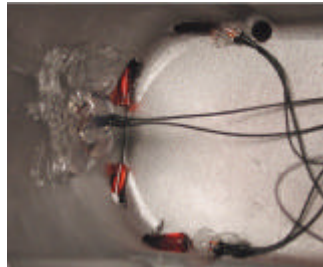

Install lamps in parrallel for illumination of the markers. Then cover the lamps with foil tape to prevent light from seeping through.

