

ENGINEER

Operating Instructions



DALLEE
ELECTRONICS, Inc.

246 W. Main St., Leola, PA 17540
(717) 661-7041

Caution - Electrically operated product. Please read and follow instructions to insure safe operation and handling.
Refer all service to Dallee Electronics, Inc.

OVERVIEW

The ENGINEER THROTTLE is an integrated circuit design, full feature, momentum throttle. The standard ENGINEER produces 13 volts DC with a maximum current of 5.0 amperes. The GAUGE-1 ENGINEER produces 18 volts DC with a maximum current of 4.0 amperes. In addition to its meter instrumentation and adjustable pulse generation circuitry, the ENGINEER allows the user to vary both the throttle speed response (momentum) and the service brake response. This variability of both throttle and brake response permits realistic simulation of handling characteristics ranging from light engine movement to full tonnage trains. Interlocked reverse is also a standard feature of the ENGINEER. Interlocked reverse requires the train to stop before the reverse switch becomes functional. The ENGINEER is equipped with a regulation circuit which maintains a constant output voltage and therefore constant locomotive speed. The ENGINEER's pulse generation circuitry allows adjustment of pulse height to permit matching of pulses to individual locomotive motor starting requirements. The pulse frequency is varied automatically according to the demand established by the ENGINEER's output voltage level.

The ENGINEER has a four position brake switch which simulates most operating functions including acceleration, deceleration and/or braking and continuous running. This brake switch, together with the reverse interlock feature are combined in the optional WALK-A-ROUND controller to permit walk around control, with memory, of the ENGINEER from any number of remote plug in locations.

DESCRIPTION & LOCATION OF COMPONENTS AND CONTROLS

On the rear face of the ENGINEER you will find the power cord, a resettable circuit breaker and a barrier strip with two terminals. These two terminals are for the output to the track. There are no other outputs provided as it is our judgement that all power in the throttle should be reserved for output to the track and any accessories should be connected to a separate power source.

The voltmeter is located in the upper left area of the face panel and is used to monitor track voltage. Adjacent to the voltmeter and to its right is the ammeter which is used to monitor the current flow to the track (load). To the right of the meters you will find a red indicator which is used to show maximum current conditions. During short circuit or currents in excess of maximum, this indicator will illuminate. If the overload continues the ampere output will become less than when the short/overload occurred (this is known as foldback current limiting) and the output

voltage will gradually decrease to a low setting. This will eliminate jack rabbit starts which would otherwise occur when the overload is corrected. These indications depict proper function of the internal, electronically limiting, output current regulator.

In the upper right corner is the power switch which will glow green when the ENGINEER is "ON".

Below the meters, at the left, is the reversing switch. This switch is like a DPDT type without center off. Its two positions are labeled FORWARD and REVERSE and its function is interlocked so that direction can only be changed when throttle output is at zero voltage, indicating a full stop.

To the right of the reversing switch and at about the center of the panel is the PULSE control which allows the matching of throttle pulse output to the starting characteristics of the motors in the various types of your locomotives. Rotating this control clockwise increases pulse height. Pulse frequency is automatically varied according to demand established by throttle output voltage. With the PULSE control in full counter-clockwise position the pulse circuit is off.

Below the reversing switch is the throttle SPEED control which determines the output voltage to the track and consequently locomotive speed. While clockwise rotation increases speed, it may be more convenient to set this control at a maximum speed setting and use the brake switch for actual operation. IMPORTANT--- There is no "OFF" position on the speed control. Full counter-clockwise results only in a minimum output which can allow locomotives to creep. To bring a locomotive to a complete stop the BRAKE switch must be used.

To the right of the SPEED control and centered on the lower row of controls is the THROTTLE RESPONSE or "momentum" control. This control adjusts the time frame required for output voltage to change from one speed setting to another. Clockwise rotation increases the time frame and therefore longer delay (slower response). The right side of the panel is devoted to the braking system and contains two controls. The upper control is the actual BRAKE switch which, with its four positions, is the heart of the ENGINEER's operating functions. These four positions are labeled RELEASE, LAP, SERVICE, and EMERGENCY. With the BRAKE switch in RELEASE the SPEED control and its momentum adjustment, also the pulse generation circuitry, are connected to the CAB output and the train will accelerate to whatever speed is set on the SPEED control. The LAP position is similar to a cruise mode where the train will maintain the speed at which LAP was selected. SERVICE is an actual braking application. When SERVICE is

selected, the output voltage to the track is reduced, which causes the train to slow down to an ultimate stop. The rate at which this slow down occurs is varied by the BRAKE RESPONSE control. The EMERGENCY position provides a rapid stop. The BRAKE RESPONSE control located directly below the BRAKE switch is an additional momentum adjustment which varies the deceleration available during a service brake application. Clockwise rotation of this control increases the response time of the braking application, taking longer to slow down and thereby simulating a heavier train. It is also possible to "LAP" the brakes by alternating the brake switch between the SERVICE and LAP positions. This will simulate the action of an "air" train brake.

THROTTLE OPERATION

Now that you are familiar with the location and function of the various components and controls of your ENGINEER, lets hook up to the layout and practice running a locomotive. Connect the CAB output terminals on the back of the ENGINEER to the track using your existing power distribution system. We recommend the use of #16 gauge or heavier wire, depending on the size of your layout and the length of the wire runs out to the track. A simple rule to follow: the longer the wire and the larger the load(current draw), the heavier the wire should be to minimize line loss(voltage drop) between the throttle and the track. It may be advisable to use wire as large as #8 or #10 to get the full use of the high current capabilities of your ENGINEER.

Put the BRAKE switch in EMERGENCY and rotate all controls to their full counter-clockwise position. Connect the power cord to a grounded household line outlet (110-120 VAC) and push the top part of the power switch. The green lamp should illuminate. If it does not, check the power cord and plug, the outlet receptacle and the household line circuit. With power on the ENGINEER, the first step is to adjust the pulse circuit to match the motor in the locomotive selected.

- 1) Check - - - brake in EMERGENCY and all controls full counter-clockwise.
- 2) Release brake and rotate pulse control clockwise until locomotive just begins to creep. If pulse is set too high the motor will be noisy. It may be necessary to increase the SPEED control very slightly in order to get the pulses to turn on.
- 3) Set both throttle and brake response to about 9 or 10 o'clock to provide some momentum delay.

- 4) Increase speed control clockwise - - - acceleration should be smooth. Set speed control at 12 o'clock and let speed increase.
- 5) Make a service brake application to a full stop and watch for a smooth deceleration. Watch meters for evidence of pulses as stop is approached.
- 6) Release brake and watch start again.
- 7) Brake again to a full stop.
- 8) If the start and stop are sudden the pulses are probably set too low. If the start and stop are jerky or the motor is noisy the pulses are set too high and should be lowered. (Note: 3 pole motors will always be somewhat jerky in operation as compared to a 5 or 7 pole motor) Also, some mechanisms just are not smooth enough to appreciate the full effect of the pulse circuit.
- 9) Fine adjust the pulses until you are satisfied with the smoothness of operation.
- 10) Pulse settings will vary from locomotive to locomotive because of differences in motor and gear tolerances, however these settings are unique and should be repeatable every time a specific locomotive is run.

With the pulses adjusted to match the locomotive, lets practice actual operation. Initially we will operate just the locomotive so the response settings (both throttle and brake) should be at or close to minimum. Try about 9 o'clock for now. Let the speed control remain at the 12 o'clock position. With the reverse switch in the forward position we should be ready to proceed. Release the brakes and lets move on down the track. Note that the start is smooth and acceleration is gradual up to the speed selected. Check the voltmeter and see what voltage is actually reached at this setting. Change the speed control to a higher setting and watch as the voltage and speed increase. To slow down we have two choices. We can lower the speed control or we can apply the brakes. Leave the speed control set at about 3 o'clock which should be around 12 volts (15 volts on the GAUGE-1). Shift the brake switch to SERVICE. Voltage will immediately reduce at whatever brake response is set and the locomotive will slow down. If you stay in SERVICE you will come to a complete stop. Release the brakes again and accelerate back up to about 12

volts. This time make a SERVICE application down to 8 volts and move the brake switch to LAP. The locomotive will continue to run at the 8 volt speed. Make another brake application down to 6 volts and return to LAP. Note that the loco has now settled at a lower speed. To increase speed merely release the brakes and accelerate to the voltage required, then select LAP.

If you were dragging a train instead of only a locomotive, the time needed to accelerate or to stop will depend on how heavy the train is. Change both response controls to about 12 o'clock which simulates a medium weight train. Release the brakes and note that it takes considerably longer for the train to reach the selected speed. Make a SERVICE application and also note that slow down takes considerably longer. If this is an extremely heavy freight drag the acceleration would be very gradual and when stopping it would be like being shoved into the next county. Adjust both throttle and brake response to the maximum clockwise settings and try running your train now. Note the wide range of operating characteristics you are able to simulate with the adjustments available on your ENGINEER.

Try once more with the momentum adjustments set to positions more in line with your usual trains. When demonstrating the ENGINEER at shows we frequently use a throttle response of about 11 o'clock and a brake response of about 9 or 9:30. Think of the voltmeter as a speedometer. Set the SPEED control at some maximum point, release the brakes and get your train headed out of town. Since the signals have been clear we can run at the speed limit. As we round a curve there is a yellow signal telling us to slow down to approach speed. Make a SERVICE application with the brake switch to bring the train speed down and then select the LAP position. As we approach the next signal we see a red and must prepare to stop. Make a series of brake applications, returning the brake switch to LAP each time. This will reduce speed to a low level but will maintain continuous forward movement. Repeat SERVICE and LAP as often as necessary to achieve a smooth and realistic approach and stop. One final SERVICE application should stop your train exactly where you wanted it. If you missed the stop point, try again. With practice you will become an accomplished engineer with your ENGINEER.

SOUND OPTION

The ENGINEER is equipped with a basic sound control to operate with our standard sound systems. The control of the Whistle / Horn, Bell, force N8 (diesels) for both type 1 and type 2 sound systems are accessible via the DB9

connector located on the front panel of the ENGINEER. It is necessary to either purchase the optional WALK-A-ROUND controller with sound control or wire momentary push buttons for these functions. Standard DC sound systems are type 1. Sound systems with more features, such as the Kohs & Company GG1 sound system, are type 2. See page 6 for wiring details.

WALK-A-ROUND OPTION

The ENGINEER is equipped with a 9 pin jack on the front where the optional hand control for walk around operation plugs in. The hand control duplicates the reverse, brake and both response controls of the ENGINEER. The hand control has a ten foot cord with the correct plug. Any number of 9 pin jacks can be located around the layout as long as they are parallel wired to a plug back at the ENGINEER. To use the hand control to operate the ENGINEER:


- 1) Reverse switch on the ENGINEER in FORWARD.
- 2) Preset PULSE adjustment.
- 3) Preset SPEED control.
- 4) Set THROTTLE RESPONSE on the ENGINEER to minimum.
- 5) BRAKE switch on the ENGINEER in LAP.
- 6) BRAKE switch on hand control should initially be in EMERGENCY.
- 7) Plug the hand control into the 9 pin panel jack and operate with the brake switch and other controls, same as if they were on the ENGINEER.

Because only the control functions are remoted to the hand control, all power to the train continues to come from the ENGINEER which remains connected to the track. If you unplug the hand unit, control returns to the ENGINEER. If your train is in motion when you unplug, the ENGINEER will continue this motion because the brake switch is in LAP. If you were in reverse when you unplug you will continue in reverse even though the ENGINEER is in forward because of the interlock feature of the reverse switch.

ONE FINAL COMMENT:

The black finish of the ENGINEER is a powder coating which makes the application of the white lettering and art work very difficult to adhere. Epoxy ink has been used to insure durability, however because of the powder coat base the lettering is subject to scratching. **PLEASE HANDLE WITH CARE.**

WALK-A-ROUND connections

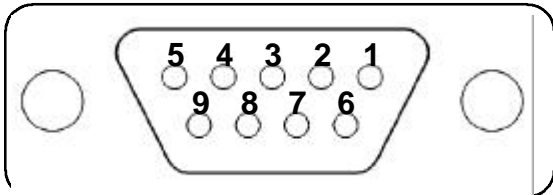

as viewed from the front
of the ENGINEER

<u>Connect</u>	<u>Function</u>
1-2.....	Reverse Switch
4-3.....	Release
4-5.....	Brake (Emergency)

Type 1 SOUND control:

1-6.....Whistle (m)

1-7.....Bell (m)

Type 2 SOUND control:

1-6.....Whistle (m)

1-7.....Bell (m)

9-8.....type 2 select, toggle
switch

(m) - momentary type switch

as in all sound control systems the Whistle / Horn is only activated when the button is pressed or held on. The bell, and force N8, function is a push on, push off operation with pauses between presses.

In normal positions, all connections are "OPEN". This means "LAP" and "Forward". When connecting 4-5 emergency brake application will occur, having a series resistance (such as found in our hand controller) will cause a slow braking effect. Connecting 4-3 will "RELEASE" the brakes and allow acceleration at the "throttle" response rate to the "SPEED" setting. Connecting 1-2 places the ENGINEER in "Reverse"

The ENGINEER is also equipped with our basic SOUND CONTROLLER for our In Locomotive DC Sound System. As shown by connecting 1-6 the WHISTLE signal is transmitted. Connecting 1-7 the BELL signal is transmitted. When pressing both the WHISTLE and BELL buttons simultaneous, force Notch 8 (or similar function depending on the sound system) is signaled. When the ENGINEER is set for zero volts output and a WHISTLE or BELL signal is sent, the overload indicator may flash momentarily, this is normal and not an indication of overload. The standard, In Locomotive DC Sound System, is a type 1 system. To operate these types of systems pin 8 is not connected. To operate type 2 sound systems, pin 8 needs to be connected to pin 9. If operating both types, a simple toggle switch will do to select between the two types.

DO NOT short any terminals to others that are not to be connected as internal damage will occur!!

As reference:

pin1.....ground

pin9.....+15vDC - limited current DO NOT attach unspecified devices to this power pin or internal damage will occur

ENGINEER WALK-A-ROUND #348 controller instructions



WALK-A-ROUND
with Sound Control
option shown.

The WALK-A-ROUND attachment for the ENGINEER throttle duplicates the BRAKE switch, THROTTLE RESPONSE, BRAKE RESPONSE, and REVERSE switch of the ENGINEER. To activate the WALK-A-ROUND follow these instructions:

- 1) place REVERSE switch, on the ENGINEER, in "FORWARD".
- 2) place BRAKE SWITCH, on the ENGINEER, in "LAP".
- 3) plug the WALK-A-ROUND into the ENGINEER jack.

The preceding activates the WALK-A-ROUND jack. To use the ENGINEER controls locally either unplug the WALK-A-ROUND or place the WALK-A-ROUND controls in "LAP" and "FORWARD". The ENGINEER features an interlocking reverse feature. This feature allows the user to unplug the WALK-A-ROUND control, while the train is still running, and replug the WALK-A-ROUND elsewhere to resume control. When the WALK-A-ROUND is unplugged, the ENGINEER enters the LAP position and retains the direction selected when the train was started. Multiple WALK-A-ROUND controllers may be used in parallel as long as they are placed in the "LAP" and "FORWARD" positions.

Remember the speed desired and pulse amplitude must be preset since they are not contained in the WALK-A-ROUND control box. Additional connectors and cable is available from DALLEE ELECTRONICS INC., refer to your current price sheet, or call, for these items.

ENGINEER WALK-A-ROUND SOUND EQUIPPED option.

The ENGINEER is equipped with a basic sound control to operate with our standard sound systems. The upper push button switch signals the "WHISTLE" and the lower switch signals the "BELL". When both the Whistle / Horn and Bell buttons are depressed force N8 for diesel locomotives, cylinder blow down for steam locomotives (if available in the sound system) are activated. The toggle switch selects between type 1 and type 2 sound system operation. Standard DC sound systems are type 1. Sound systems with more features, such as the Kohs & Company GG1 sound system, are type 2.